

# User's manual

## with installation instructions

### for AUTOTERM air heaters

AIR-2D 12V/24V

AIR-4D 12V/24V

AIR-8D 12V/24V

AIR-9D 12V/24V

**Manufacturer:** AUTOTERM LLC

Paleju 72, Marupe, Latvia, LV-2167

**Warranty Department** [warranty@autoterm.com](mailto:warranty@autoterm.com)

**Technical Support** [service@autoterm.com](mailto:service@autoterm.com)

[www.autoterm.com](http://www.autoterm.com)

## Table of contents

Introduction .....	3
1 General instructions and operating principle .....	4
2 Safety precautions .....	5
Retrofitting .....	6
3 Main requirements for installation of assemblies and units of the heater .....	7
3.1 Installation of the heater .....	8
3.2 Installation of the air intake pipe .....	11
3.3 Installation of the exhaust pipe .....	13
3.4 Installation of the fuel system .....	16
3.5 Installation of wiring of the heater.....	20
3.6 Installation of the temperature sensor (optional).....	21
3.7 Installation of the control panel .....	21
4 Testing of the heater after installation and first launch.....	22
4.1 Automatic Control Features .....	23
5 Installation of air ducts.....	23
6 Recommendations .....	26
7 Malfunctions .....	28
8 Warranty Terms.....	31
<i>Annex 1: Basic parameters &amp; specifications of heaters .....</i>	<i>32</i>
<i>Annex 2: Connection diagrams of heaters.....</i>	<i>34</i>
<i>Annex 3: Size and dimensions of heaters .....</i>	<i>36</i>
<i>Annex 4: Electrical wiring diagrams of heaters .....</i>	<i>38</i>

Dear Customer!

Thank you for choosing the AUTOTERM AIR heater! We are doing everything to make sure this product meets your requirements. It is essential to us that the quality of our products satisfies every customer.

## **Introduction**

This manual is intended for organizations that specialize in installation and maintenance of AUTOTERM AIR air heaters (2D 12V/24V; 4D 12V/24V; 8D 12V/24V; 9D 12V/24V) (hereinafter referred to as heaters, or 2D, 4D, 8D and 9D for shorter) as well as users of the product after installation. The document covers instructions and guidelines for the installation of the product on a variety of land vehicles, and small maritime vessels (e.g. yacht, boat, cutter). It also covers function tests of the product after installation, and basic maintenance procedures to ensure the heater operates reliably.

Please read this manual before installing and/or operating the AIR heaters. This manual contains important information to use this product safely and correctly. Disregarding these instructions can void the warranty of the product, lead to damage of the product and/or property, and be a health risk.

## 1 General instructions and operating principle

The AUTOTERM AIR heaters are designed to be used for:

- heating of various confined spaces, of vehicles, for example driver's cabin or cargo compartment of vans or trucks at ambient temperatures up to -45°C;
- heating cabins, cargo compartments and other various confined spaces of maritime transport.

The heater operates independently of the vehicle engine.

Heaters built-in fan draws air through the air intake opening. The air heated by the heater is channeled to cabins and desired spaces via outlet channels.

Fuel is supplied by a separate fuel pump from the fuel tank of the vehicle or vessel or from an additional fuel tank.

The heater can be powered by a battery of the vehicle or a separate battery.

Temperature in rooms can be regulated by using a temperature sensor and a control panel, which sets heating parameters.

When a temperature sensor is present (either built into the control panel or additionally installed), the heater is constantly comparing the actual temperature with the set temperature and automatically adjusts the heating capacity according to the heat demand.



Installation of the heater and its components **must be carried out by specialized organizations** approved by AUTOTERM. Installation of the heater must be carried out **only by certified specialists** in accordance with the installation instructions.



If the heater is handled and/or installed improperly, there is a **possibility of a fire hazard** and **damage of property** because fuel and electrical components are being used. That is why all safety precautions and installation instructions must be carefully read and followed.

---

Basic parameters and specifications of the heaters can be found at the end of this manual (see Annex 1).

## 2 Safety precautions



- Do not use or install the heater in places where flammable vapors, gases or large amounts of dust may form and accumulate.
- Disable the heater when the vehicle or vessel is being fueled.
- Do not cover the heater with clothing, pieces of fabric and so on, and do not place such objects in front of the air intake pipe, or inlet and output of the heated air.
- Do not install the fuel line inside the cabin of a vehicle.
- **The installation configuration must exclude the possibility of contact of the exhaust pipe with the air intake, fuel pipe, or other flammable objects.**
- The vehicle where the heater is installed must be equipped with a fire extinguisher.



- Do not install the heater electric wiring (harnesses) near the fuel line and the exhaust pipe.
- Disconnect the heater from its battery during repair work on the heater.
- Do not connect the heater to the power circuit of the vessel when the engine is operating and there is no battery.
- Do not connect or disconnect connectors of the heater when the heater is powered.
- When electric welding is carried out on the vehicle, or repair work is done on the heater, the heater must be disconnected from the battery.
- Do not use fuses rated differently from indicated on the electric circuit diagram.
- Do not use makeshift devices (wires etc.) instead of fuses.



- The relevant safety precautions must be observed when working with coolant liquids and electrical and fuel systems when installing and dismantling the heater.
- **Do not disconnect the heater from power before the purge cycle ends.**
- When the heater has been switched off, do not switch it on again for 5-10 seconds.
- Do not step on the heater or put any objects on it and in it.
- **Electric wiring, the air intake, and the fuel pipe must be protected from contact with sharp edges of vehicle structures.**



- For safety reasons, contact the service shop to troubleshoot the heater if it fails to launch twice in a row.
- In case of faults in the operation of the heater, contact specialized repair organizations authorized by AUTOTERM.

**If the consumer fails to follow the requirements above, the warranty of the heater becomes null and void.**

## Retrofitting

For replacing different brand of heater for an AUTOTERM AIR heater, following things must be checked first:

→ Diameter of exhaust pipe.

The AIR-2D and AIR-4D have an exhaust pipe with an internal diameter of 24mm and AIR-8D and AIR-9D have an exhaust pipe with an internal diameter of 38mm.

Some brands use different diameter exhaust pipes, if so, it needs to be changed to necessary diameter suitable for the heater in use. Larger diameters can be used, if needed. (see “*Section 3.3*”, for more information on installing the exhaust pipe).



Disregard of this advice can lead to insufficient output of exhaust gases due to backpressure, thus damaging the heater.

---

→ Fuel system.

When retrofitting a heater, all old fuel pipes, and fuel pumps must be removed completely and a suitable fuel system for AUTOTERM AIR heater must be installed instead.

Different brands of fuel pumps can have different fuel output and fuel pipes can be in a different diameter. (see “*Section 3.4*”, for more information on installing the fuel system).



Disregard of this advice can cause fuel overflow in the heater or insufficient flow of fuel, thus damaging the heater.

---

→ Electrical wiring.

All old wiring, electrical connections, control panels, etc. must be removed and installed with new AUTOTERM AIR suitable components. (see “*Section 3.5*”, for more information on installing the wiring of the heater).



Electrical related faults are common when using different and unsuitable electrical components.

---

→ Diameter of air ducts.

At least 60mm air duct must be used for AIR-2D, at least 90mm air duct for AIR-4D, and at least 100mm for AIR-9D. If the existing air duct is smaller in diameter, then everything must be changed up to the first branch with the necessary diameter and as well as the first hot air outlet. After that the size of air duct can be decreased using different adapters (see “*Section 5*”, for more information on air ducting).



Disregard of this advice can cause the heater to overheat, thus damaging it.

**DO NOT connect air ducts to AIR-8D.**

---

### 3 Main requirements for installation of assemblies and units of the heater

The heater can be installed both inside, and outside of the vehicle. Install the heater in a dry place that is protected from ingress of water and condensate, dirt, excessive vibrations and heat emissions, engine emissions or fuel or oil contamination.



Installing the heater on a maritime transport, it must be protected from ingress of overboard water.

Consider the maximum heel of the vessel. A heel must not bring overboard water into the discharge channel for exhaust gases, and bilge or overboard water must not get on the heater.



Installing the heater in a cargo hold of the vehicle, install the heater at a height and location that prevents contact with cargo and in a way that the cargo would not obstruct the intake/outlet of the heater.

---

The heater must be installed following safety requirements and taking into account the type of vehicle or vessel. Consider everything related to peripheral equipment, for example, the maximum permissible length of the exhaust gas channel and intake of air for combustion, the location of the passage in the board (for maritime transport), the layout and length of electric wires, distance from the fuel tank, layout of air ducts of warm air, intake of fresh air.

All precautions must be observed when installing the heater to reduce the risk of injuries to personnel or damage to the equipment as much as possible.

### 3.1 Installation of the heater

Install the heater, taking into consideration permissible operating position according to Fig. 1a/b. Take into account the possible heel of the vessel, if installing on a maritime transport.

When heater is positioned with exhaust pipe facing downwards and air inlet facing towards you, it is considered 0° position. AIR-2D and AIR-4D can be tilted everything between 0 and 90°. From the same point of view, wires on the 2D and 4D must remain on the right side or on the top of the heater. **The AIR-8D and AIR-9D should not be tilted (see Fig. 1a).**

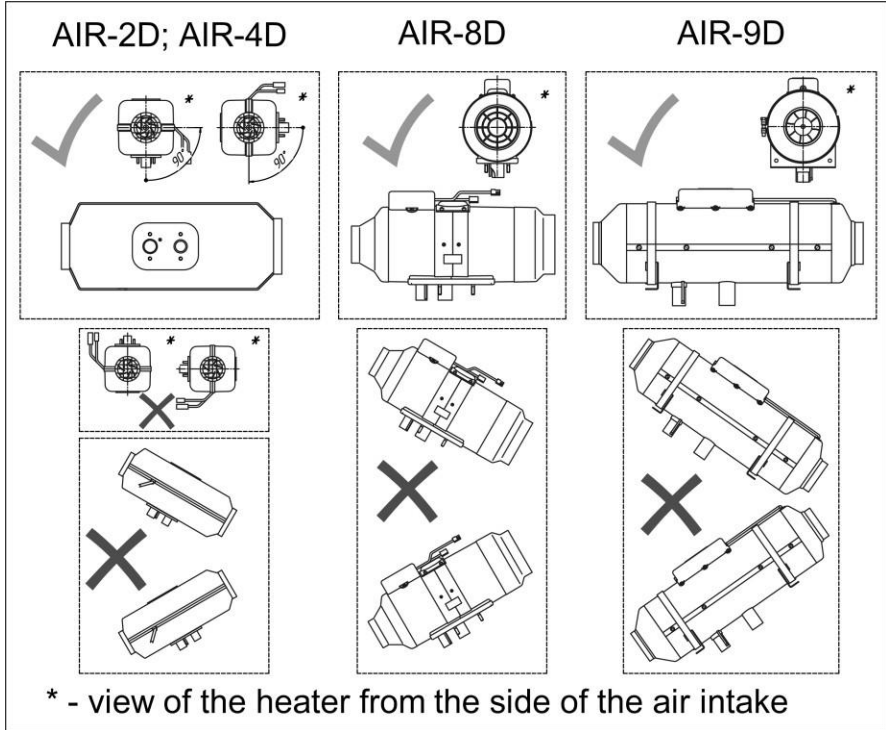



Fig. 1a - Mounting positions of the heater



**WARNING!!!** Reliable operation of the heater depends on the correct installation of the heater. The heater must be installed horizontally (according to Fig. 1a).



The distance from surrounding objects must be sufficient to ensure good ventilation. The distance from walls and partitions to the start of the inlet opening of the heater must be no less than **50mm for AIR-2D/4D** and **100mm for AIR-8D/9D** (see Fig. 1b). The distance from walls and partitions to the start of the outlet opening of the heater must be no less than **150mm for AIR-2D/4D** and **250mm for AIR-8D/9D**. Provide protection from penetration of foreign objects into intake and output openings, when installing and operating the heater. Install the heater so that it is convenient to do maintenance work. The air heater must be installed in a manner that allows for easy access for repairs and maintenance; failure to ensure this accessibility may result in additional charges for the time spent accessing the heater during service, and these costs may be passed on to the owner or the original equipment installer.

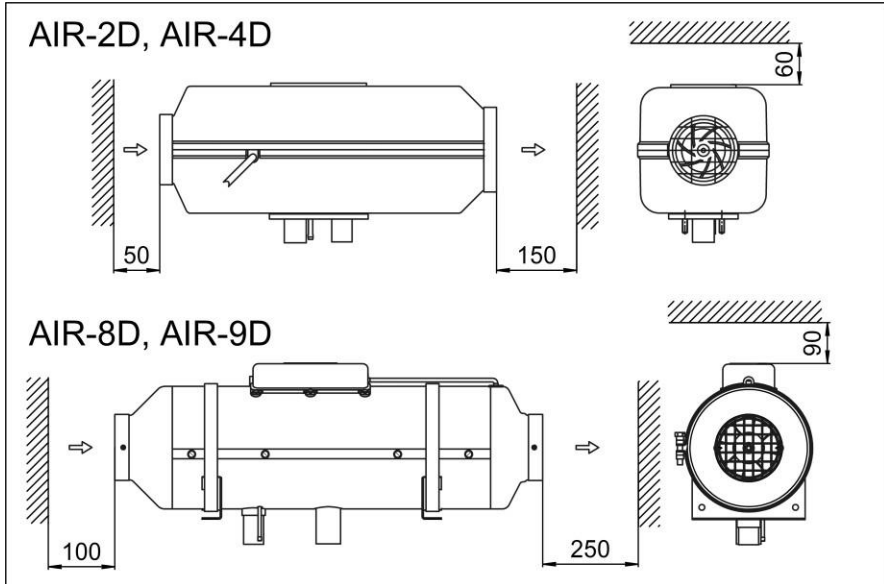

**Fig. 1b – Distance from walls**

For installing air ducts, these distances need to be considerably greater (see “Section 5”, for more information on air ducting).



**DO NOT install near flammable or heat-sensitive objects such as sails, fenders, clothing, sheets, paper, gas pipelines, fuel tanks, etc.**

When installing the heater, make sure that the mounting flange is the only place of contact with the mounting surface of the vehicle or vessel. The casing of the heater should not contact any surface (Fig. 2b), to avoid deformation of the heater casing, jamming of the air blower fan and potential overheating.




Install the heater on a flat surface, because installing on uneven surface, can bend the casing of the heater, thus blocking the fan (common cause of error 27).

It is recommended to use an appropriate mounting bracket specific for desired mounting location (variety of mounting brackets can be purchased at your local dealer) and the rubber seal (seen in Fig. 2) for the installation surface of the heater, when installing the heater.


In case the heater is installed in a large passenger van or a bus, it may be installed without using mounting brackets.

In case the heater is installed on a pedestal or a mounting bracket, cover the air intake, exhaust pipe, and fuel pipe areas with a metal cover.

In case the heater is mounted outside the vehicle in a protective box, it is recommended to include drain holes at the lowest part of the mounting box to prevent water from collecting inside. Additionally, small drainage holes should be drilled in the lowest parts of the air intake and hot air outlet hoses. This helps reduce the risk of condensation, which can cause corrosion and potentially lead to the malfunction of the electronic parts.

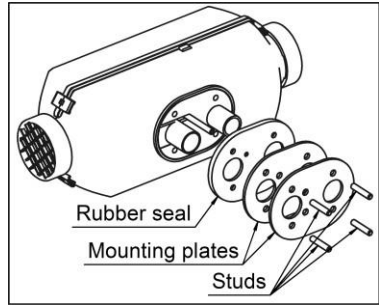


**Fig. 2a - Mounting plates**

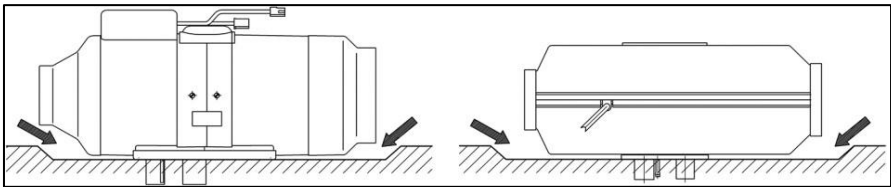

**Fig. 2b - Leave some free space**

For heaters AUTOTERM AIR-2D and AIR-4D, holes in the body of the vehicle should be made as shown in Fig. 3. Heater can be installed using mounting plates shown on Fig. 2. In this case studs provided with the heater must be replaced with longer studs.

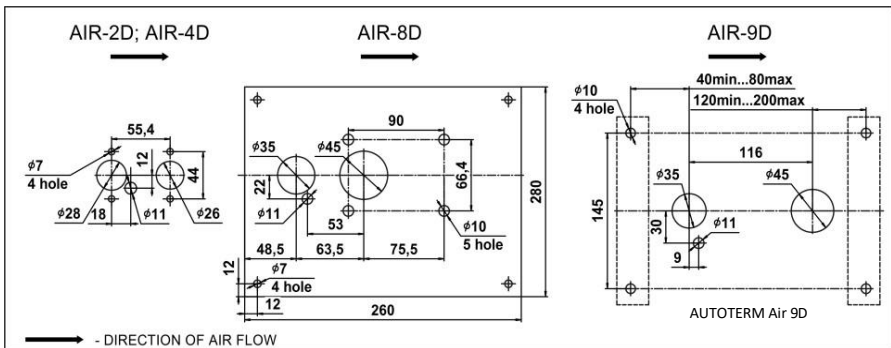

**Fig. 3 - Mounting holes**

Cut the opening inside the vehicle body (in case the side wall/floor is not thicker than 3 mm) for AIR-8D heater installation as shown on Fig. 3. With the thickness of the vehicle body (floor) of more than 3mm, installation of the heater requires the following:

1. Cut a rectangular hole in the vehicle body sized 180×95 mm;
2. To attach the mounting bracket\* to the heater (this bracket can be made of steel sheet at least 2.5mm thick);
3. Install the exhaust pipe, air intake, and fuel line to the heater and fasten the whole assembly to the body of the vehicle.

\* — *optional part*

### 3.2 Installation of the air intake pipe

**The air for combustion must not be taken from the interior, living space, engine or luggage compartment of the vehicle or vessel.** Air should be taken from well-ventilated areas or from outside of the vehicle or vessel.

The maximum length of the air intake pipe is 2 meters. The air pipe must be as short as possible (cut to the necessary length).



It is forbidden to use the heater without an air intake pipe.

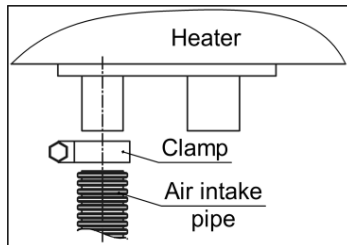


Fig. 4 – Connection of the air pipe to the heater

The air intake pipe is connected directly to the pipe of the heater and fastened with a clamp. (Fig. 4).

When laying the air intake pipe, avoid sharp bends and do not obstruct the opening of the air intake pipe with foreign objects. Make sure its opening is pointing downwards (see Fig. 5).

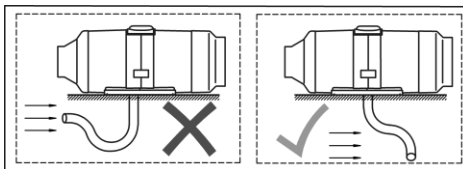


Fig. 5 – Position of air intake/exhaust pipe

If that is not possible Ø3mm hole needs to be drilled at the lowest point of the pipe.

The correct installation of the exhaust and air intake pipes is when they are on the same side (Fig. 6a/b). The distance between them should exclude re-suction of exhaust gases through the air intake (at least 20 cm).

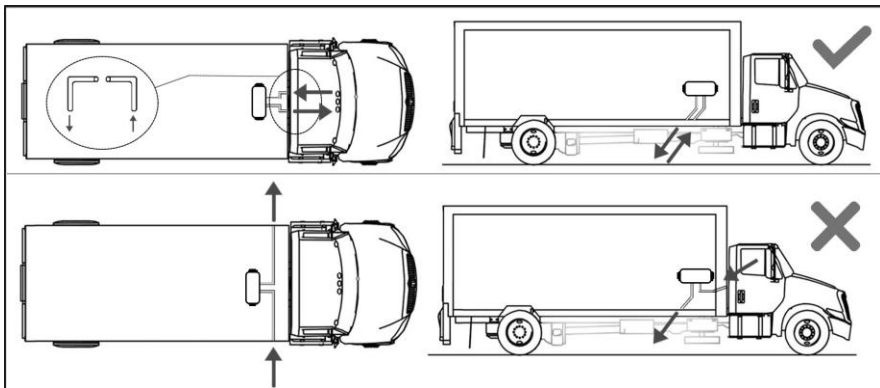


Fig. 6a – Location of intake and exhaust pipe on land vehicles

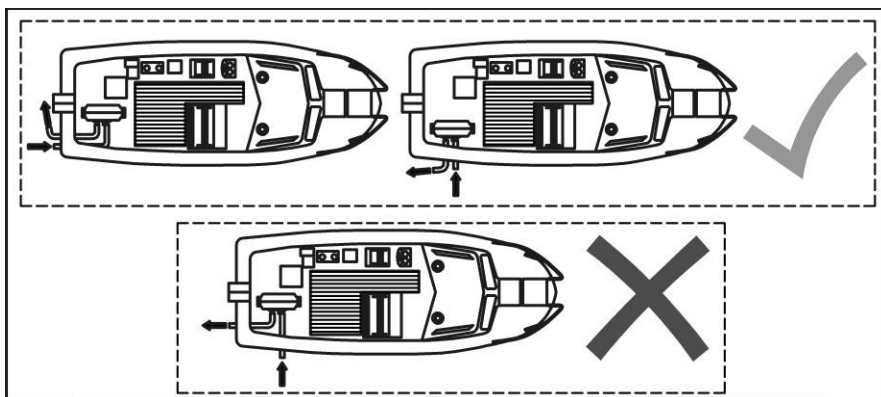


Fig. 6b - Location of intake and exhaust pipes on maritime



Disregard of this recommendation can lead to the opposite movement of the flame towards the air pump fan, to melting of air pump fan and to burning of a heater.



Air intake must not be installed in the movement direction of the vehicle/vessel.



In cases when intake of clean air cannot be ensured, such as off-road and special purpose vehicles, please mount the dedicated AUTOTERM air filter (assy.2684).

### 3.2.1 Installation of the air intake pipe on maritime transport

→ *Air intake from well-ventilated areas.*


Ambient pressure and sufficient ventilation using outside air must be present in the air intake zone. Increased or reduced pressure in the air intake zones is not allowed. It is recommended to attach the air duct all along its length to the hull of the vessel using plastic clamps, when possible. Put a cap on the end of the air duct to protect it from drawing in foreign objects.

→ *Air intake from outside of the vessel.*

An air intake pipe (Fig. 7) should be used to take the air from outside. Make an opening  $\text{Ø}26^{+1}$  mm in the board of the vessel to install it. Install a rubber gasket between the flange of the air intake pipe and the hull of the vessel. Attach the air duct using three bolts as shown on Fig. 7. Attach the air duct to the air intake pipe using the clamp. It is recommended to attach the air duct all along its length to elements of the hull of the vessel using plastic tie straps, when possible. Make a 3mm opening at the bottom point of the air duct to drain condensate or any water, which has penetrated the air intake pipe.



**Do not place the intake opening of the air intake pipe in front of the incoming air flow of the moving vessel.**

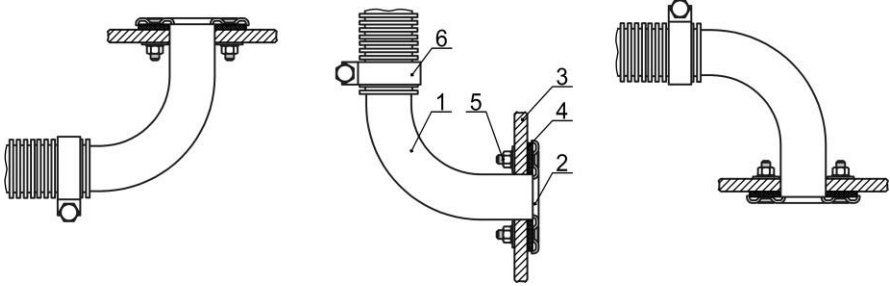


**Fig. 7 - Installation of the air intake pipe**

- |                                    |                        |
|------------------------------------|------------------------|
| 1 – Air intake pipe;               | 4 – Gasket;            |
| 2 – Flange of the air intake pipe; | 5 – Fastener assembly; |
| 3 – Hull of the vessel;            | 6 – Clamp.             |

### 3.3 Installation of the exhaust pipe

When installing the exhaust pipe, take into consideration the high temperature (up to 500°C) of the exhaust pipe when heater is in operation. Cut the exhaust pipe (flexible crinkled metal hose, maximum length – 2 meters) to the necessary length. It is advised to use a two-layer exhaust pipe when installing the heater. Attach the exhaust pipe (Fig. 8) using clamps and install it so that it is slightly inclined to the bottom in the direction of exhaust. Install heat insulation on the exhaust pipe to protect individual sections of the vessel (wiring or other heat-sensitive objects).

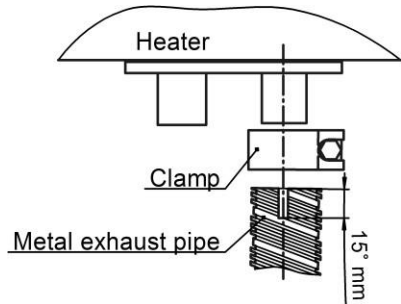


**Fig. 8 - Attachment of the metal pipe to the heater**



Install the exhaust pipe to avoid the possibility of repeated intake of exhaust gases by the air intake pipe, and make sure that no exhaust gases enter the interior or are drawn in by the fan through the cab heater radiator.



At the end of the exhaust pipe, a (optional) shield is installed only if the exhaust pipe is facing sideways and there is a risk for wind to be blown back inside to the heater. If you are installing this shield, make sure that the opening is 10mm or more (Fig. 9).

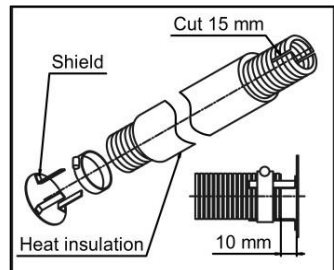

**Fig. 9 – Exhaust pipe shield**

Exhaust gases must be removed outside of the vehicle.

The heater is provided with an airtight exhaust silencer. This means it can be mounted in small vessels and confined spaces. But for mounting exhaust silencer on the outside of the vehicle, Ø5mm hole needs to be drilled at the bottom of the silencer (see Fig. 10a).


If desired mounting situation requires the exhaust silencer to be mounted vertically, condensate drain hole must be drilled, like shown in Fig. 10b, to avoid condensate build up in exhaust silencer. If that is not possible, it is recommended to install it sideways (see Fig. 10a).

The outlet of the exhaust pipe must be installed **pointing downwards** (Fig. 5), but it should be in such a position that it would prevent clogging or entering of snow and dirt and provide for free drain of any water that got into it.


**When installing on maritime transport, silencer must be mounted using the bolt and a nut provided, so it would be in fixated position.**

Make longitudinal cuts (about 15mm) (see Fig. 8, Fig. 9, Fig.11) on ends of the metal hose to ensure better sealing when connecting the heater pipe to the pipe for discharge of exhaust gases through the board of the vessel, but without going beyond the pipe to be covered.


Rubber bushing (sold separately) must be used if the exhaust pipe goes through plastic parts, for example, bumper of a vehicle (see Fig. 11).

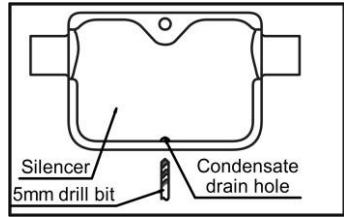

**Fig. 10a – Condensate drain hole for horizontal mounting**

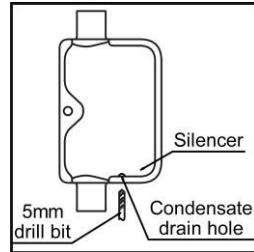

**Fig. 10b – Condensate drain hole for vertical mounting**

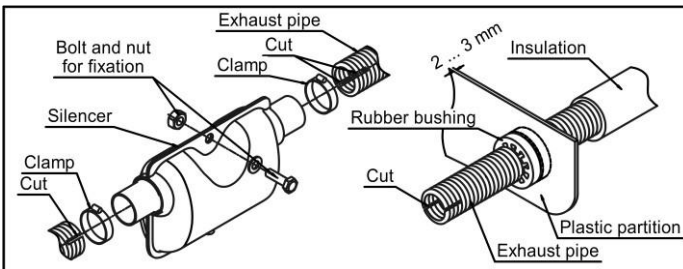


**Fig. 11 - Attachment of the exhaust pipe to the heater and usage of rubber bushing**



**The exhaust pipe needs additional insulation at every connection of the metal hose, for example, using a heat-resistant tape or sealant, to prevent any leaks of exhaust gases at connection points.**



**Additional heat insulation must be installed at places where the exhaust pipe goes through the floor or the side wall of the vehicle (Fig. 12) to avoid unnecessary fire hazard.**

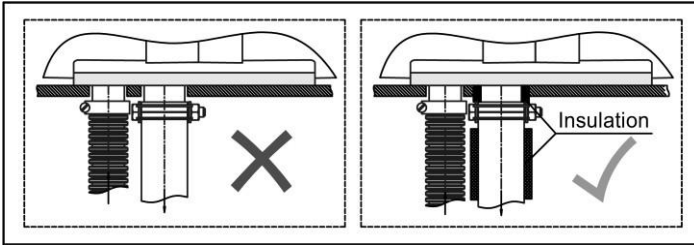

**Fig. 12 – Installation of additional heat insulation**

The end of the metal hose should not contact the rubber seal of the heater. It is advised to install the discharge of exhaust gases in a way, that does not allow exhaust gases to flow inside the spaces used by people, like drivers' cabin or living quarters of maritime transport (e.g. away from open windows, doors), to avoid the possibility of inhaling dangerous exhaust gases.



**Do not place the output opening of the exhaust pipe in front of the incoming airflow of the moving vehicle or vessel (see Fig. 5).**

### 3.3.1 *Installing exhaust adapter on maritime transport*


Exhaust gases are discharged overboard the vessel. Install the discharge of exhaust gases in a location inaccessible to water (at least 60 cm above the waterline) and to avoid the possibility of repeated intake of exhaust gases by the air intake pipe.

To install the exhaust pipe adapter (hull fitting), drill a hole in the hull of the vessel at least 5 mm larger in diameter than actual outer diameter of the hull fitting. Install the exhaust pipe into it as per Fig.13 with the pipe looking upwards (to avoid penetration of water). Install a rubber gasket between the flange of the exhaust pipe and the hull of the vessel to seal the connection.

To prevent exhaust gas leaks or falling off of the exhaust pipes, it is advised to use an exhaust cement or different kind of sealant on every connection of the exhaust pipe.

Sailboats should not install the exhaust adapter on the side of the hull, only at the stern.

- |                                 |                 |
|---------------------------------|-----------------|
| 1 – Exhaust pipe adapter;       | 5 – Fasteners;  |
| 2 – Flange of the exhaust pipe; | 6 – Clamp;      |
| 3 – Gasket;                     | 7 – Metal hose. |
| 4 – Hull of the vessel;         |                 |

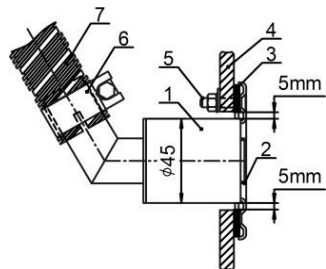

**Fig. 13 - Installation of the exhaust pipe**

### 3.4 Installation of the fuel system



**Do not operate the heater using biofuel.**

Use only diesel fuel standard EN590, depending on the ambient temperature.

Act as instructed on Fig. 14 and Fig. 17 to install the fuel system. The fuel pump and the fuel supply line must be protected from heating.

It is recommended to install a small inline fuel filter before the fuel pump. Make sure that the filter is completely filled with fuel. Also make sure that you're using fuel lines of the same diameter as provided with the heater.



Do not take fuel from fuel filter or its casings, because doing so causes a leak of fuel.



Do not take fuel from the fuel line between the fuel filter and fuel pump of the vehicle's engine, the return line of the engine or after the high-pressure pump of the vehicle.

**The heater is not designed to work with such high pressure.**

Fuel line system should be as short as possible. The recommended maximum length of the fuel line is 5m. Distance between fuel tank and fuel pump should not exceed 1m and distance between fuel pump and the heater should not exceed 4m (see Fig. 14 and Fig. 17).




For the Air 9D heater, a thick nylon fuel line Ø6x4mm (Assy: P2737) should be used. The distance from the fuel tank to the fuel pump should not exceed 1m (the closer the fuel pump is to the fuel tank, the better).

#### 3.4.1 Fuel suction using a fuel suction hose



Before installing a fuel suction hose in a fuel tank of the vehicle or vessel, make sure that the fuel level is high enough to ensure operation of the heater, and low enough to easily remove the fuel tank, if needed.

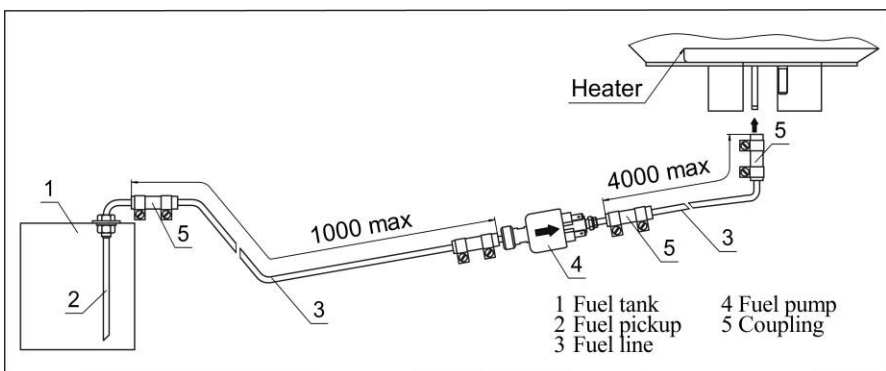


**Fig. 14 - Example of fuel supply to the heater with fuel suction hose**




Fuel is taken directly from the fuel tank of the vehicle or vessel or an additional tank. Drill a hole  $\varnothing 16\text{mm}$  in the fuel tank to install a fuel suction hose. When drilling the hole in the fuel tank, follow safety precautions that should be observed when working with a transport, which is filled with fuel or explosive substance.

If needed, cut the immersible tube of the fuel suction hose shorter before installation. Its bottom end must be located about 10-15 mm above the bottom of the tank, or at the height to provide fuel for engine in the fuel tank at any time. The cut at the end of the fuel suction hose must be made at a  $45^\circ$  angle to the axis of the tube. Remove all burrs from the cut after the work is done.

Install the fuel suction hose in the fuel tank as per Fig. 15a. Install the special washer of the fuel suction hose in the tank hole as per Fig. 15b. Apply a fuel-proof sealant on the threaded surface of the fuel suction tank to properly seal the connection between the fuel suction hose and the fuel tank.

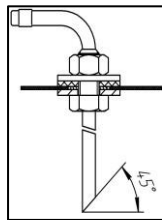

**Fig. 15a – Installation of the fuel suction hose**

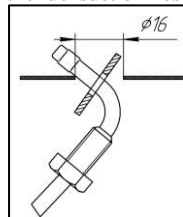

**Fig. 15b – Installation of the washer**



Never install the suction hose on the side of the fuel tank. It must be installed on the top side of the fuel tank.

### 3.4.2 Fuel suction from an additional fuel tank


Consider convenience of fueling, when installing the fuel tank (Fig. 16). Install the fuel tank in such a way that the amount of fuel and its potential leaks from the inlet, fuel suction nozzle or connections can be visually controlled.



When filling the fuel tank, be careful not to spill any of the fuel on the exhaust system, wiring or other objects, which can be damaged due to their contact with fuel.




**Fuel tank must be installed with its wide side perpendicular to the direction of the movement of the vehicle/vessel (see Fig. 16).**

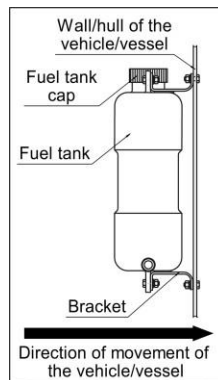

**Fig. 16 Installation of the fuel tank**

### 3.4.3 Fuel suction from the fuel tank of the vehicle

Fuel is taken from a fuel line of the vehicle using a T-piece (see Fig. 17). This method can be used if there is no pressure in the fuel line. If vehicle is equipped with a low-pressure fuel pump in the fuel tank, then those fuel lines cannot be used, fuel suction hose must be installed instead. **Mind the installation position of the T-piece.**

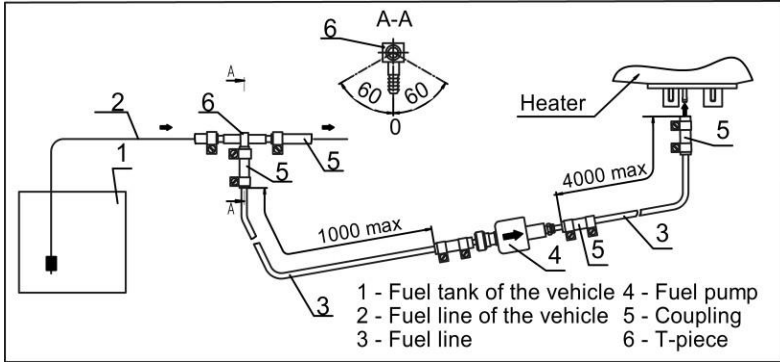


**Fig. 17 – Fuel suction using a T-piece**

### 3.4.4 Installation of the fuel pump and the fuel supply line

The fuel pump is connected to the heater through its own harness and supplies fuel depending on the required heat capacity to the combustion chamber of the heater. The fuel pump is operated by electrical impulses sent by the control unit. When running, the fuel pump makes a characteristic metallic clicking noise.

It is recommended to install the fuel pump close to the fuel tank (distance should not exceed 1 meter (see Fig. 14 and Fig. 17)) and below the low level of fuel in the fuel tank, but not lower than 70cm of the minimal fuel level (see Fig. 19, point a). But the distance between the fuel pump and the heater cannot be greater than 1,5 meters (see Fig. 19, point b). Fuel pump should be positioned with a slight angle pointing upwards (see Fig. 18).

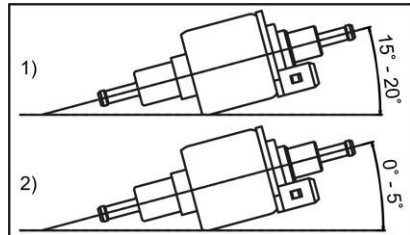


**Fig. 18 – Installation angle of TH-9; TH-10; TH-11 fuel pump (1) and Thomas Magnete (2) fuel pump**

If for some reason sealing of the fuel pump is compromised, it is advised to install the fuel pump lower than the heater in order to avoid leaks and overflowing the heater with fuel due to gravity.



Remember to properly bleed the “silent” TH11 fuel pump. If it’s not properly bled it will be as loud as standard fuel pump.

To bleed it start the heater and position the fuel pump with its outlet upwards till there are no air bubbles in the fuel line and only then secure fuel pump in its recommended position.

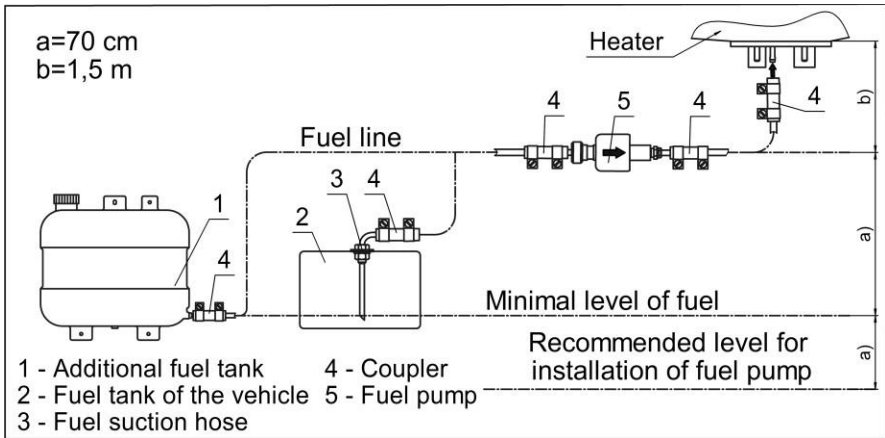

**Fig. 19 – Height position of the fuel pump in the fuel system**


Attach the fuel pump to the flexible rubber clamp (supplied with the heater), which reduces the transfer of noise to the frame of vehicle or hull of the vessel (see Fig. 20).

Act as instructed on Fig. 14 and Fig. 17 to install the fuel supply lines. Use clamps to attach fuel supply lines. Do not tighten the clamps too much, try to avoid leaks because clamps break easily if tightened with too much force.

It is preferable to lay the fuel supply line on a straight line and with a small inclination upwards in the direction of the heater. The fuel supply line should be fastened at equal distances to prevent sagging, prevent effects of vibrations and avoid fractures. Do not allow contact of the fuel pump and the fuel supply line with hot objects. Cut the fuel supply line using a sharp knife only as per Fig. 21. At the locations of cuts, there should be no narrowing of the flow cross-section of the fuel line, debts or kinks.




**Fig. 20 - Flexible rubber clamp**

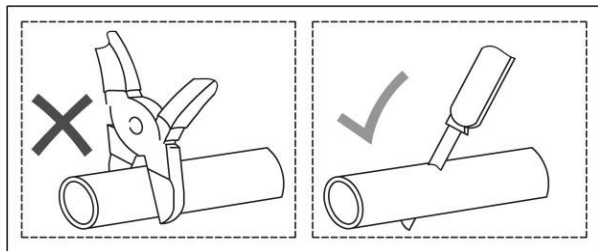

**Fig. 21 - Cutting of the line before installation**

Please note, to minimize the possibility of accumulation of air bubbles in the fuel system, all fuel line rubber connections should not have a gap between inserted fuel lines as per Fig. 21a.

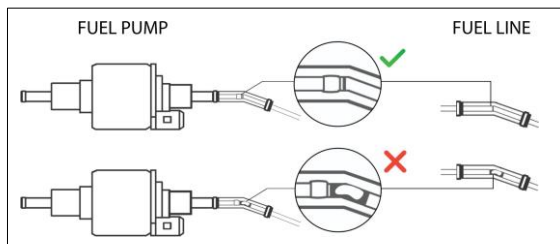

**Fig. 21a - Fuel line connections**

### 3.4.5 Installation of the electrical harness of the fuel pump



If the length of the wiring harness of the fuel pump needs to be shortened, it is allowed to remove the unnecessary portion from the middle of the harness. The connection point must be insulated.



Never connect the fuel pump to continuous DC power supply. It will burn the coil of the fuel pump.

Installation of the connector of the electrical harness of the fuel pump is shown in Fig. 22.

Make sure that the wiring of the fuel pump is installed in the desired way before inserting the pins of the wiring in the plastic casing.

Make sure that the pins are inserted all the way to the end and lock securely in the plastic casing. When it's correctly inserted, a small click can be felt. The polarity of the pins does not matter.

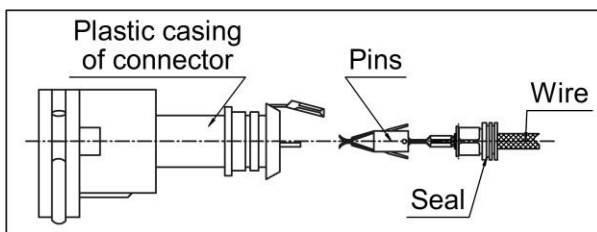


Fig. 22 - Installation of the connector of the electrical harness of the fuel pump

## 3.5 Installation of wiring of the heater

Install electric harnesses of the heater according to the diagram of electrical connections of the heater (see *Annex 4*).

When installing electrical harnesses exclude the possibility of them being heated. Install all the wire harnesses and electrical elements in dry and protected places. No deformation or moving of wires is permissible, when the vehicle or vessel is operated.



### IMPORTANT!

**Fuses must be removed before installing electrical harnesses.**

Battery of the vehicle or an auxiliary battery powers the heater. Control the charge of the battery on a regular basis. It is recommended to disconnect the heater from the battery to avoid its discharge during long dockage or storage of the vessel or vehicle. **Do not disconnect the heater from power before the purge cycle ends.**

Heater must be connected to uninterrupted power supply at all times. Cutting the power to the heater will result in loss of settings (clock, operation mode and settings).

If the heater is connected to an existing electrical installation, the wiring should be in sufficient diameter to prevent voltage drop (main cause of error 15). It is always recommended to connect the heater directly to the battery of the vehicle/vessel or auxiliary battery. It is strongly recommended to use new and provided wiring for the installation of the heater.

### 3.6 Installation of the temperature sensor (optional)

The temperature sensor (Fig. 23) measures air temperature in the area of its installation and allows running the heater in a set temperature mode. Install the sensor in a convenient (appropriate) place in the heated room.

The operation of the heater with a temperature sensor is described in the operation manual of the control panel.

The maximum length of the sensor harness is 5 meters. Temperature regulation depends on the location of the sensor.

Follow these recommendations when installing the temperature sensor:

#### Install the sensor:

- ✓ in the largest heated cabin;
- ✓ in the middle position of temperature distribution in the cabin;
- ✓ on a vertical internal wall of the cabin, if possible;
- ✓ at a distance from sources of heat.

#### Do not install the sensor:

- ⊘ close to the deflector, to avoid the effect of the flow of warm air;
- ⊘ near the gangway;
- ⊘ behind cushions or curtains or other accessories;
- ⊘ in a direct sunlight;
- ⊘ close to the ceiling.

When the temperature sensor has been installed, lay the line up to the heater location. Connect the shoe of the temperature sensor to the corresponding connector on the heater.

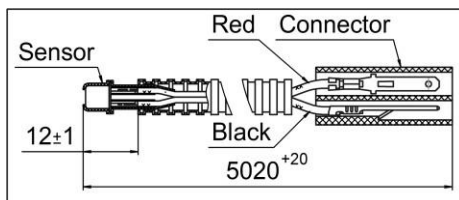


Fig. 23 – Temperature sensor

### 3.7 Installation of the control panel

The control panel is intended for control of operation of the heater. Install the panel in a convenient (appropriate) place protected from water. The panel is attached using double-sided adhesive tape or a standard bracket (Fig.24). The wire may be brought out of the panel casing through the back cover or the partition of the inner surface of the panel casing. Before installation degrease the surface, where the panel is to be installed. Remove protective film from adhesive tape and install the panel on the prepared surface.

Never extend the cable of the control panel itself. It's transmitting a digital signal. In the event of a bad connection, this will result in malfunctions. If the provided cable is too short, it is recommended to purchase an extension cable from a local dealer.

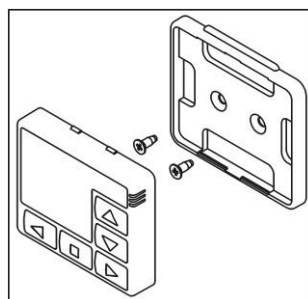


Fig. 24 – Installation of the control panel PU-27 using a mounting bracket

#### 4 Testing of the heater after installation and first launch

The heater can be put in operation only when the system has been fully installed!

After installation, check:

- tightening of clamps;
- voltage of the battery;
- reliability of attachment of electric contacts of harnesses and assemblies of the heater.

Fill the fuel main line with fuel, preferably using a fuel-priming device, which can be ordered from official dealers. When the fuel system is filled, check that the fuel supply line is sealed.

Start the heater and check its operation in minimum and maximum modes. Check tightness and sealing of all connections of air ducts and fuel supply lines.

Run the heater in maximum mode for about 2 hours.



**During the first launch, the exhaust pipe might emit some smoke for a short period of time.**

---

The launch process of the heater starts with under a minute-long power-on-self-test. At that time heater self-checks its components for errors. During this phase all components are powered up once, which results in a single audible pump click, a short fan burst, and internal checks of glow plug and sensors. After that it starts a phase of heating the glow plug to remove any fuel vapors remaining from the previous cycle of work, which is up to 120 seconds long, and does not make any sounds. Be patient.

After the purge ends, starts the process of ignition and continuation of the set mode, which means that the fan will slowly start to rotate and fuel pump start to click.



**Before starting the desired working mode and power/temperature setting, the heater will power up to 100% to heat up the combustion chamber and to ensure proper burning temperatures.**

**Depending on the ambient temperature and model of the heater, this process can take up to 15 minutes.**

---



**Hot air is produced only after heating up the heat exchanger. This process takes up to 3-5 minutes depending on the ambient temperature and model of the heater.**

**IT DOES NOT HAPPEN INSTANTLY.**

---

Stop the heater. When the heater is stopped, the fuel supply stops, and the combustion chamber and the heat exchanger are vented to reduce temperature.

After the first launch, please test the heater with a running engine of vehicle/vessel to check possible fuel and/or power supply problems.



**During the first few hours of operation, heater can emit an unpleasant smell. To get rid of the smell, run the heater for several hours on maximum power. Ensure good ventilation of the place of installation.**

---



**The insulation of the exhaust pipe has to burn-in. That also causes an unpleasant smell.**

---

## 4.1 Automatic Control Features

- 1) If for some reason the heater did not start, the start-up process will be automatically repeated. After two failed attempts the heater will be switched off;
- 2) If during the heater's operation burning is interrupted, the heater automatically restarts. Restarts after consecutive flameouts are performed up to three times;
- 3) In case of overheating the heater coil (for example, due to blocked intake or output of the heating unit), the heater is automatically switched off;
- 4) If the maximum temperature of the heated air is exceeded (for example, due to closed outlet of the heating unit), the heater is automatically switched off;
- 5) If voltage drops below 20V (10V) or increases to more than 30V (16V), the heater automatically switches off. The numbers in parentheses are for the heaters with the nominal voltage of 12V;
- 6) If the heater switches off due to an emergency situation, a malfunction code appears on the control panel. The malfunction code and the LED indicating the operation mode will be blinking.
- 7) In case one of the temperature sensors is faulty, the heater will not launch, and a malfunction code will appear on the control panel.

## 5 Installation of air ducts

The air for heating must be taken from a clean space protected from rain, splashes, dirt, water and **without exhaust gases**. Never draw air from the engine compartment.

Fresh air from outside or recirculated air from rooms can be taken for heating.

### → Intake of fresh air.

The air is taken from outside, heated and supplied to inner rooms. This operation renews air in heated spaces and lowers humidity. Note locations of outlet vents in cabins and make sure that their number is sufficient.



When installing the heater on a maritime transport avoid ingress of overboard or rainwater into the inner space of the heater.



Air intake from outside can lead to loss of heating capacity, increase of fuel and electrical power consumption. **For safety reasons it is not recommended**, because of the high risk of drawing exhaust gases (yours or other vehicles') into the living spaces.



Air intake duct should not exceed 1.5 meters from heater to inlet.

### → Air intake from inner rooms.

In this case, heated air is taken from inner rooms. The advantage of such an option is fast heating due to better use of heat. However, this operation does not lower humidity, and the air in the heated spaces is not renewed.



Use only thermally stable air ducts and components, designed for operation temperature up to 130°C, to lay channels for heater air!

Heat insulation is necessary to reduce heat losses when laying air ducts through the rooms or spaces that do not need heating, for example when installing ducts over or nearby batteries.


---



**WARNING!!!**

**Do not connect air lines to AIR-8D air heaters because it can cause overheating of the heater.**

Additional air duct components can be added to the heater for distributing hot air (Fig. 26a/b/c). Each of the components reduces total flow rate of hot air (Fig. 25). In order for you to be sure that the option you have selected for the installation of air ducts is acceptable and will not result in a massive flow rate reduction of hot air or overheating of the heater you have to consider the distribution of the air with different components.

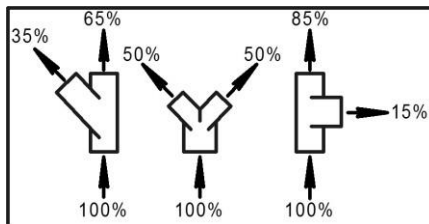

**Fig. 25 – Examples of air distribution with different components**



Air duct system should be kept as simple as possible. Complicated systems lead to heat loss.

Diameter of air duct depends on the model of the heater. Air duct system always must start with the designated diameter for the type of the heater, after that diameter can be reduced using different adapters (see Fig. 6b/c). Using smaller diameters than designated as a start of the system, can cause heater to overheat.

Heater	Size of duct
AIR-2D 12/24V	ø60 mm
AIR-4D 12/24V	ø90 mm
AIR-9D 12/24V	ø100mm

**Table 1 – Minimal size of the ducts depending on the model of the heater**



**First meter of the air duct must be as straight as possible. 90° and other sharp bends are not allowed within the first meter from heater outlet.**



**When using double channel air ducts, one channel should end with a non-closable air outlet.**

The heater is supplied with inlet and outlet grilles already installed. In such a case, the heater can be used for heating of the room/cabin, in which it is installed. If several rooms/cabins need to be heated, lay air ducts along the perimeter of the vessel. Replace the inlet and/or outlet grille on the heater to connect the air duct to it (only for AIR-2D and AIR-4D). Use a flat screwdriver to disengage hitches on the heater casing and remove the grille. Install an adapter (only for AIR-4D) and attach the air duct to it with a clamp. Use different shape adapters and connectors for distribution of warm air (it is recommended to use Y-shaped adapters to reduce resistance and increase effectiveness, if possible). Install deflectors on ends of air ducts (Fig. 6a for AIR-2D, and Fig. 6b for AIR-4D).






**When installing an air duct at the air inlet the noise level will rise.  
It is recommended to install a silencer.**


Do not deform channels with heated air. This may add additional resistance to the flow of warm air and reduce efficiency of heating.

**Install air ducts without excessive bends or narrowed sections. The cross-section area of the air duct must not be less than the outlet of the heater.**

When distributing supply of hot air, one of the deflectors **MUST** be of a non-closable type to avoid overheating of the heater.

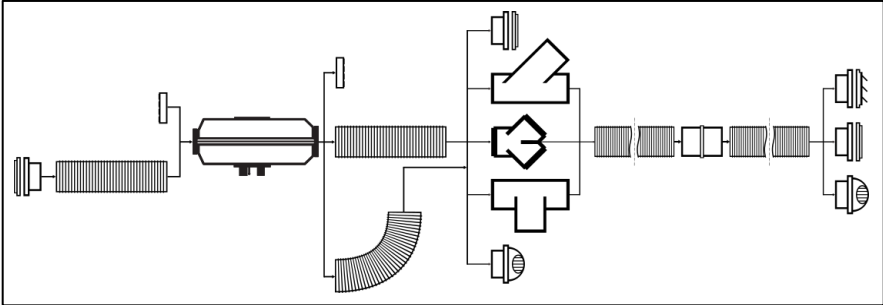

**Fig. 26a – Air duct connections for AIR-2D (60mm)**

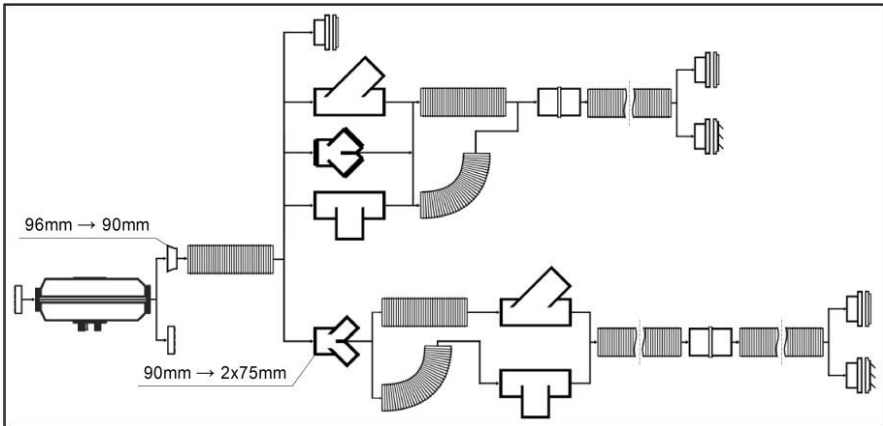

**Fig. 26b – Air duct connections for AIR-4D (90mm/75mm)**

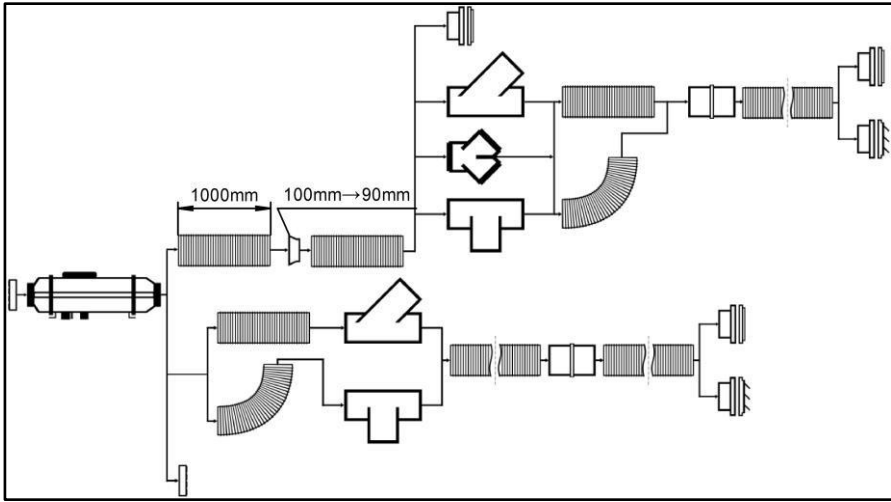


Fig. 26c – Air duct connections for AIR- 9D (100mm/90mm)

## 6 Recommendations

If the heater does not start after switching it on, make sure there is fuel in the tank, check the charge of the battery, check if connectors are properly connected and if the 25A fuses are good.

If you are unable to find the root cause of the fault, contact your nearest dealer or service center, or the website [www.autoterm.com](http://www.autoterm.com).

### WARNING!



1 When starting the heater for the first time after installation, it is preferable to fill the main fuel line up to the input nozzle of the heater using a priming device. If there is no priming device, start the heater several times until the main fuel line is filled.



2 Important to remember that if the heater has not started after activation, the control unit will restart the heater in automatic mode. If the heater does not start after two attempts, a fault code will be displayed on the control panel. (Look for fault codes table in “Section 7 – Malfunctions” in this manual).



3 The cabin temperature sensor must be disabled (if it is installed), if you need to start the heater at a temperature above 30°C. Operation with a temperature sensor is described in the operation manual.

For the correct operation, the heater needs regular (annual) maintenance. Stop the heater and let all system parts cool down before any works:

- check for corrosion on electrical plugs and contacts (with battery disconnected);
- check sealing of fuel hoses;
- check sealing and corrosion in the system of exhaust gases;
- check whether air intake pipes and air ducts are clean;
- check air ducts for damages;
- run a computer diagnostic of the heater.

**To ensure reliable operation of the heater, switch it on once a month for 20 minutes on full power, including the warm seasons of the year, when the heater is out of operation. This action is necessary to remove any viscous film sediments on moving parts of the fuel pump. Failure to do so may lead to premature failure of the heater.**

**If separate fuel tank is used, fuel in the system has to be changed at least once a season.** Before the start of the heating season, check the fuel tank. If the tank stored fuel for a long time (for example from the past heating season), it is necessary to drain it! Rinse the tank with gasoline or kerosene and fill it with fresh diesel fuel. This procedure is designed to remove sediment formed in the fuel during prolonged storage. Failure to follow this procedure can lead to clogging or failure of the fuel pump and increased sooting in the combustion chamber.

In case of a long parking or storing the vessel or vehicle, disconnect the heater from the power source (battery) to prevent it from discharging (current consumption of the heater out of service is  $30 \div 40$  mA).

## 7 Malfunctions

<b>Fault code</b>	<b>PU-5 blinks</b>	<b>Description</b>	<b>Fault Cause</b>	<b>Recommended Solutions</b>
<b>01</b>	<b>1</b>	Overheating of the heat exchanger.	The sensor sends a signal to shut down the heater. Heat exchanger temperature in the sensor zone is over 250°C.	Check the intake and outlet of the heating unit for unobstructed entry and exit of heated air. Check the integrity of the fan and its performance. Check the temperature sensor and replace it if necessary. Inspect the heat exchanger. Check and remove carbon deposits from the inside of the heat exchanger, if necessary.
<b>02</b>	<b>12</b>	Possible overheating at the intake temperature sensor. Sensor temperature (control unit) is more than 55 degrees.	Control unit is insufficiently cooled down during 5 min. purging before start-up; or overheating of the control unit during operation.	Check the intake and outlet of the heating unit for unobstructed entry and exit of air and re-start the heater to cool it down. Replace the control unit.
<b>05</b>	<b>5</b>	Faulty temperature sensor (AIR-2D) or flame indicator.	Short circuit to the casing or open circuit in the wiring of the sensor.	Check sensor, replace if necessary
<b>04/06</b>	<b>6</b>	Faulty temperature sensor in the control unit.	Temperature sensor out of order (located in the control unit, cannot be replaced).	Replace control unit
<b>07</b>		Overheat sensor - open circuit.	Faulty sensor. Oxidation of contacts in the terminal block.	Check overheat sensor circuit for an open. Remove oxidation from the connector contacts.
<b>08</b>				See Fault Code 29.
<b>09</b>	<b>4</b>	Faulty glow plug.	Short circuit, open circuit, faulty control unit.	Check glow plug, replace if necessary. Check the control unit, replace if necessary.
<b>10</b>	<b>11</b>	Electric motor of the air blower does not develop the necessary speed.	Increased friction in the bearings or contact between the impeller and fan shroud in the blower. Faulty electric motor.	Check electric motor, if possible, correct the fault; replace air blower if necessary
<b>11</b>		Faulty air temperature sensor (intake) only for AIR-8D.	Mechanical fault. Oxidation of contacts in the block.	Check connecting wires.
<b>12</b>	<b>9</b>	Shut down, overvoltage more than 30V (for 24V) or more than 16V (for 12V).	Faulty voltage regulator. Faulty battery.	Check battery terminals and wiring. Check the battery, charge it or replace if necessary.
<b>15</b>		Shut down, low voltage, less than 20V (for 24V) or less than 10V (for 12V).		

<b>Fault code</b>	<b>PU-5 blinks</b>	<b>Description</b>	<b>Fault Cause</b>	<b>Recommended Solutions</b>
<b>13</b>	<b>2</b>	The heater does not start - two automatic start attempts failed.	No fuel in the tank	Fill the fuel tank.
			Fuel grade does not match the operating conditions at low temperatures.	Replace fuel, see Annex 1.
			Insufficient supply of fuel.	Eliminate fuel line leakage or blockage. Check the performance of the fuel pump, replace if necessary
			Clogged exhaust duct or combustion air intake.	Clean air intake or exhaust duct of possible clogging.
			Insufficient pre-heating of the glow plug, faulty control unit.	Check the plug, replace if necessary. Check voltage supplied by control unit, replace if necessary.
			The impeller touches the fan shroud in the blower, and, as a result, flow of air into the combustion chamber is reduced.	Replace blower after determining its malfunction.
			The glow plug housing in CC is clogged. Clogged glow plug screen or it is not installed all the way into housing.	Clean the glow plug hole. Replace the glow plug screen, if needed, and install it in accordance with item 5.2.
<b>16</b>	<b>10</b>	During the purge time, temperature sensor was not cooled down. Time for ventilation was exceeded.	During 5 min purge before start-up, temperature sensor was not sufficiently cooled.	Check the intake and output of the heater for unobstructed entry and exit of air. Check the integrity of the fan and its operation. Check the sensor, replace if necessary.
<b>17</b>	<b>7</b>	Faulty fuel pump.	Short circuit or open circuit in the wiring of the fuel pump	Check the wiring of the fuel pump for short circuit and open circuit. Check the wires to overheat sensor, insulation integrity.
<b>20</b>	<b>8</b>	Heater does not start.	Burnt out fuses on the power harness.	Check the fuses and replace if necessary.
			No communication between the controller and the control unit. Controller receives no data from the control unit.	Check the connectors and the green wire in the connecting harness. Remove oxidation from connectors. Check the controller and the connecting harness, replace if necessary. If the controller is operational, replace the control unit.
<b>27</b>	<b>11</b>	Motor does not rotate.	Damaged bearing or rotor, foreign objects, etc.	Check connectors and wiring leading to the electric motor board and the control unit. Eliminate the fault, if possible.
<b>28</b>		Motor rotates. Speed is not regulated.	Faulty electric motor control board or heater CU.	Replace air blower.
<b>08 / 29</b>	<b>3</b>	Flame failure during operation of the heater.	Insufficient fuel supply. Faulty fuel pump. Faulty flame indicator.	Check for leaks or clogging of fuel lines, tighten the clamps on the fuel lines. Check combustion air intake and exhaust pipe. Check the amount of fuel supplied by the fuel pump and replace it if necessary. If the heater starts, check flame indicator and replace it if needed.

<b>Fault code</b>	<b>PU-5 blinks</b>	<b>Description</b>	<b>Fault Cause</b>	<b>Recommended Solutions</b>
<b>30</b>		Heater does not start	No communication between the controller and the control unit. Control unit receives no data from the controller.	Check connectors and white wire in the connecting harness. Remove oxidation of connectors. Check controller and connecting harness, replace if necessary. If controller is operational, replace control unit.
<b>31</b>	<b>14</b>	Overheating of hot air outlet temperature sensor. <i>Only for AIR-8D.</i>	Hot air temperature sensor gives a signal to turn off the heater.	Check the temperature sensor. <i>Only for AIR-8D</i>
<b>32</b>	<b>17</b>	Faulty temperature sensor at air intake.	Faulty temperature sensor at air intake.	Check connecting wires. Check sensor. <i>Only for AIR-8D</i>
<b>33</b>	<b>16</b>	Heater control is blocked	Error "Overheating" repeated three times.	See instructions for unblocking the heater. <i>Only for AIR-8D</i>
<b>34</b>	<b>19</b>	Wrong component assembly	One of the temperature sensors (intake, output or overheating) is installed in wrong location and gives wrong signal.	Check location of temperature sensors. Check sensors. <i>Only for AIR-8D</i>
<b>35</b>	<b>13</b>	Flame failure	Supply voltage drop.	Check the battery, wiring. (Voltage drop may occur due to prolonged use of electric starter). <i>Only for AIR-8D</i>
<b>36</b>	<b>20</b>	Flame indicator temperature above normal	Faulty flame indicator. Malfunction of the stabilizer in combustion chamber.	Check flame indicator. Inspect combustion chamber. <i>Only for AIR-8D</i>
<b>78</b>	<b>3</b>	Flame failure during operation.	Air bubble in fuel system. Faulty fuel pump. Faulty flame indicator.	Check fuel lines for leaks or clogging. Tighten fuel line hose clamps. Check combustion air intake and exhaust duct.

## 8 Warranty Terms

The heater warranty terms expire when one of the following is reached:

- 24 months from the date of purchase;
- heater operation reached for all air heaters - 2000 working hours;
- heater operation reached for all liquid heaters - 1000 working hours.

The warranty does not apply to defects resulting from:

- **improper installation, which is not in accordance with valid, supplied installation instructions or approved original equipment manufacturer (OEM) applications;**
- force majeure: lightning strike, fire, flood, voltage fluctuations, accident;
- transport damages;
- usage, storage and transportation conditions have not been met;
- if the repair, adjustment or installation of the heater has been conducted by organizations not authorized by AUTOTERM;
- the independent repair or use of spare parts not approved by original manufacturer;
- use of wrong voltage;
- part failure due to water ingress;
- failure of the heater due to combustion chamber impurity. Warranty can be voided if the heater has run on low power (power lvl 1-3) and has been used more than 50% of the total fixed operation hours.

*While warranty is provided to the “original end-user”, it is to be administered and serviced through an authorized AUTOTERM dealer in accordance with the heaters warranty terms. All AUTOTERM certified services are listed on [www.autoterm.com/warranty](http://www.autoterm.com/warranty) website.*

*Normal wear of service parts: (filters, gaskets, glow plug screens and fuses are not covered by warranty).*

*For full warranty terms visit [www.autoterm.com/warranty](http://www.autoterm.com/warranty).*

*Annex 1: Basic parameters & specifications of heaters*

1. Basic parameters of the heater AIR-2D

Characteristics	Models			
	AIR-2D-12		AIR-2D-24	
Rated voltage, V	12		24	
Fuel	diesel fuel EN590, depending on the ambient temperature			
Heating output, kW:	max	min	max	min
	2	0,8	2	0,8
Hot air flow, m <sup>3</sup> /h:	max	min	max	min
	86	34	86	34
Fuel consumption, l/h:	max	min	max	min
	0,24	0,1	0,24	0,1
Power consumption, W:	max	min	max	min
	29	10	29	10
Start-up and Shutdown	manual			
Mass, kg, max	6.4			

2. Basic parameters of the heater AIR-4D

Characteristics	Models			
	AIR-4D-12		AIR-4D-24	
Rated voltage, V	12		24	
Fuel	diesel fuel EN590, depending on the ambient temperature			
Heating output, kW:	max	min	max	min
	4	1	4	1
Hot air flow, m <sup>3</sup> /h:	max	min	max	min
	168	70	168	70
Fuel consumption, l/h:	max	min	max	min
	0,514	0,12	0,514	0,12
Power consumption, W:	max	min	max	min
	57	10	56	10
Start-up and Shutdown	manual			
Mass, kg, max	11,4			



### 3. Basic parameters of the heater AIR-8D


Characteristics	Models			
	AIR-8D-12		AIR-8D-24	
Rated voltage, V	12		24	
Fuel	diesel fuel EN590, depending on the ambient temperature			
Heating output, kW:	max	min	max	min
	6	3,2	7,5	3,2
Hot air flow, m <sup>3</sup> /h:	max	min	max	min
	336	70	336	70
Fuel consumption, l/h:	max	min	max	min
	0,76	0,42	0,9	0,42
Power consumption, W:	max	min	max	min
	75	8	90	9
Start-up and Shutdown	manual			
Mass, kg, max	16,9			

### 4. Basic parameters of the heater AIR-9D


Characteristics	Models			
	AIR-9D-12		AIR-9D-24	
Rated voltage, V	12		24	
Fuel	diesel fuel EN590, depending on the ambient temperature			
Heating output, kW:	max	min	max	min
	8	3,2	8	3,2
Hot air flow, m <sup>3</sup> /h:	max	min	max	min
	413	70	413	70
Fuel consumption, l/h:	max	min	max	min
	1	0,42	1	0,42
Power consumption, W:	max	min	max	min
	290	12	210	12
Start-up and Shutdown	manual			
Mass, kg, max	18			

## Annex 2: Connection diagrams of heaters


### 1. Connection diagram of the heater AIR-2D and AIR-4D

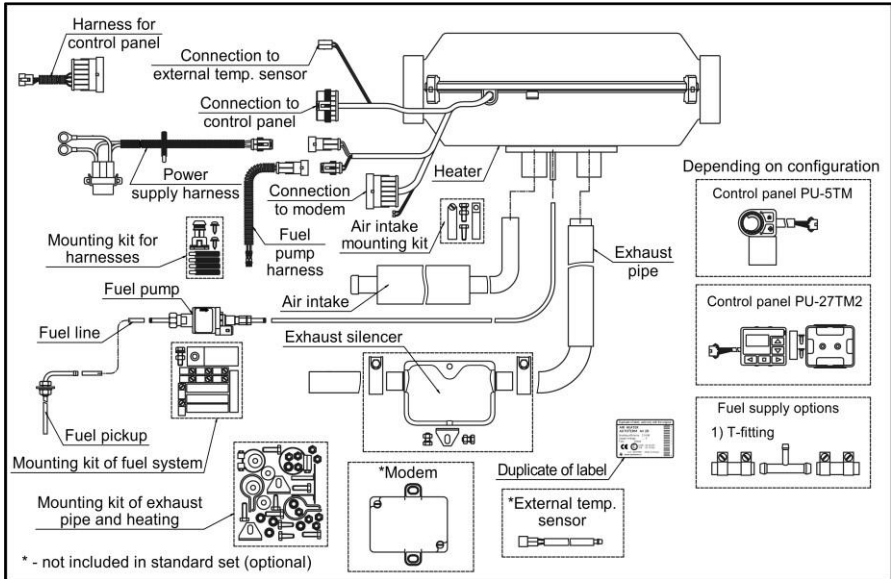

### 2. Connection diagram of the heater AIR-8D

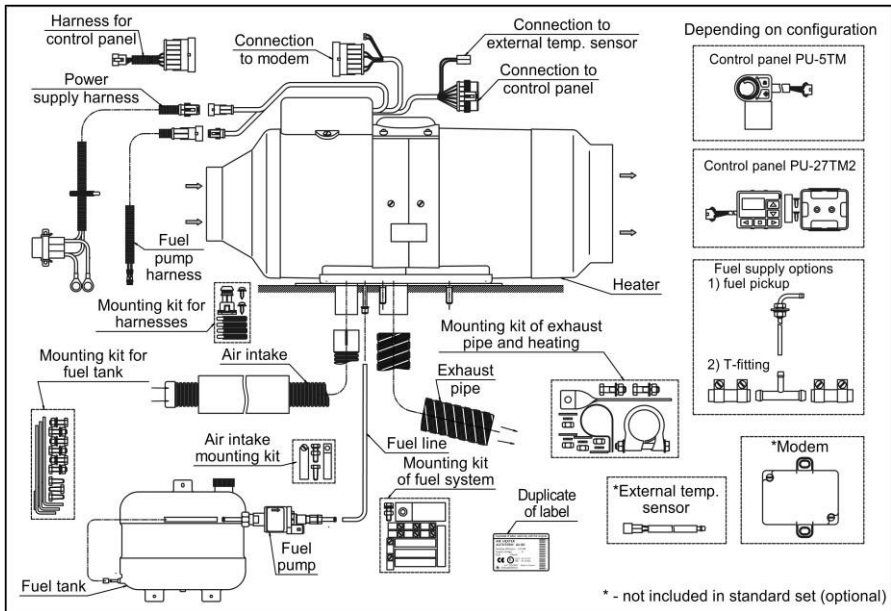


### 3. Connection diagram of the heater AIR-9D

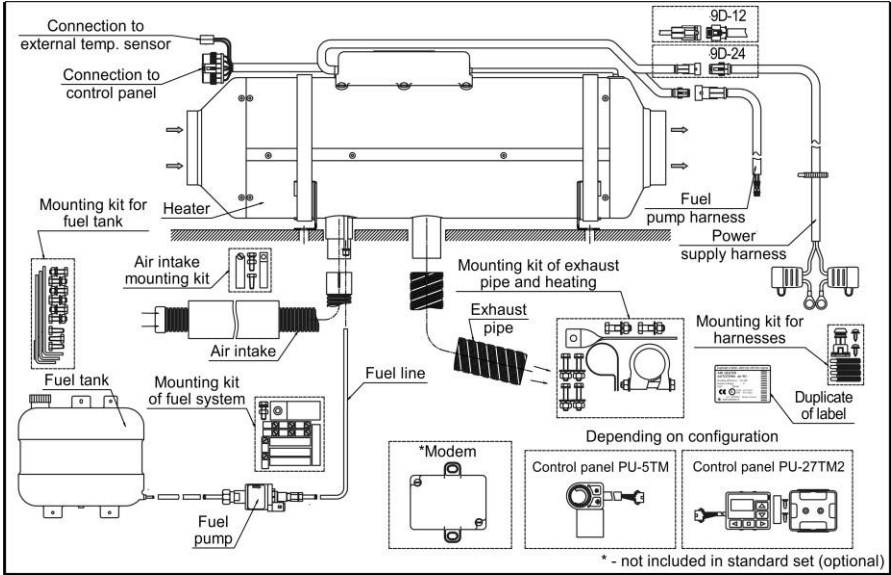


Annex 3: Size and dimensions of heaters


1. Size and dimensions of the heater AIR-2D

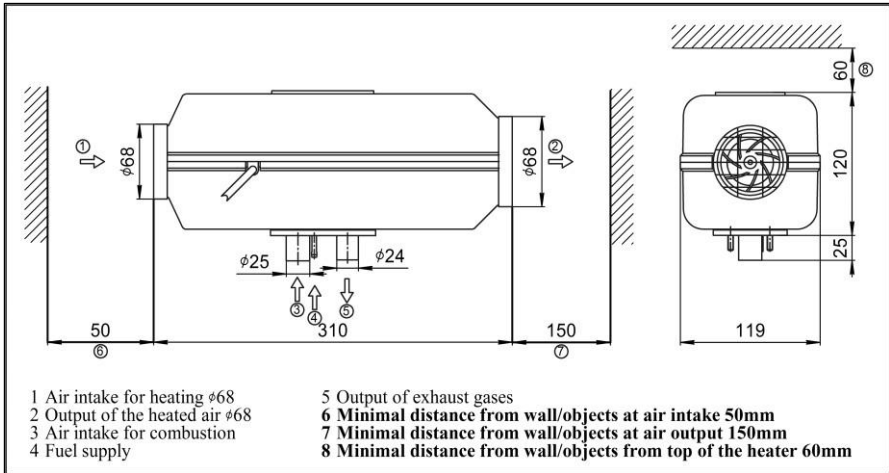


2. Size and dimensions of the heater AIR-4D

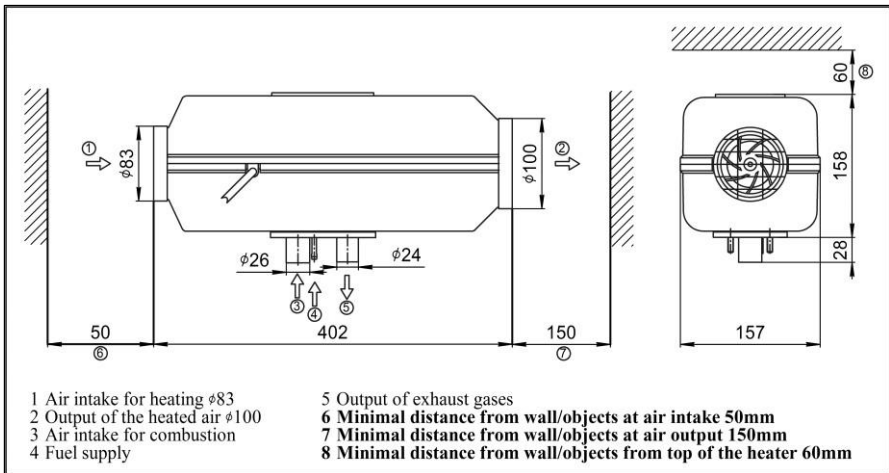

### 3. Size and dimensions of the heater AIR-8D

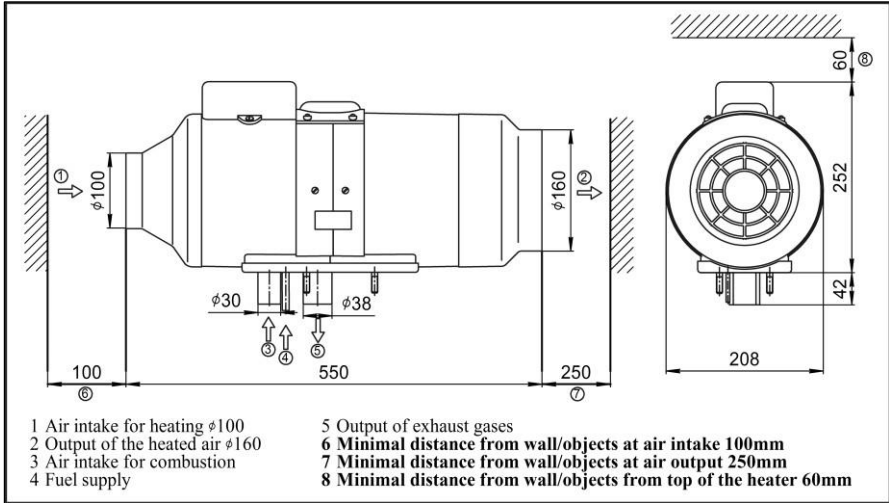

### 4. Size and dimensions of the heater AIR-9D

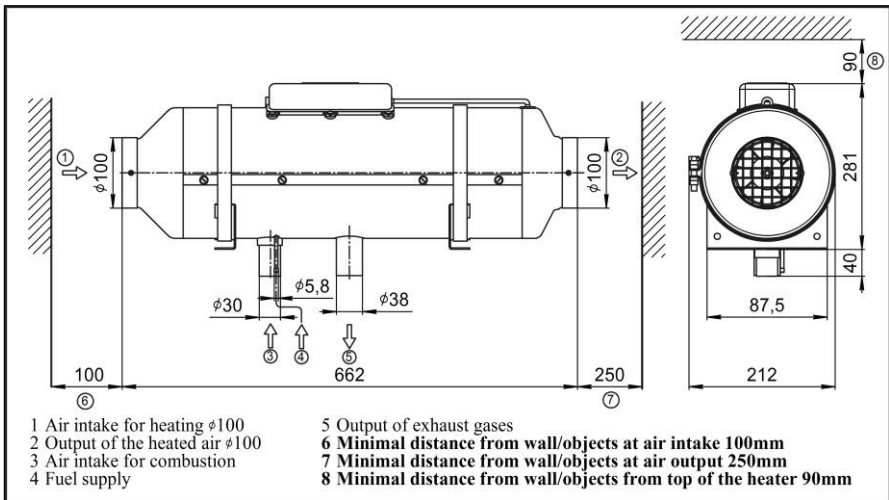

### Annex 4: Electrical wiring diagrams of heaters


Heater can also be started with vehicle alarm wires in two ways:

- If brown and white wires are connected to an impulse relay (with an impulse between 0,5-3 seconds), heater will work on previously set work mode for two hours.
- When brown and white wire is connected continuously (for example, using a rocker switch) heater will work on previously set work mode as long as these wires are connected (i.e. rocker switch is on).




For heaters manufactured from November 2019, when connected with impulse or continuously, heater will work on maximum power setting and only for 2 hours.

#### 1. Electrical wiring diagram for the heater AIR-2D

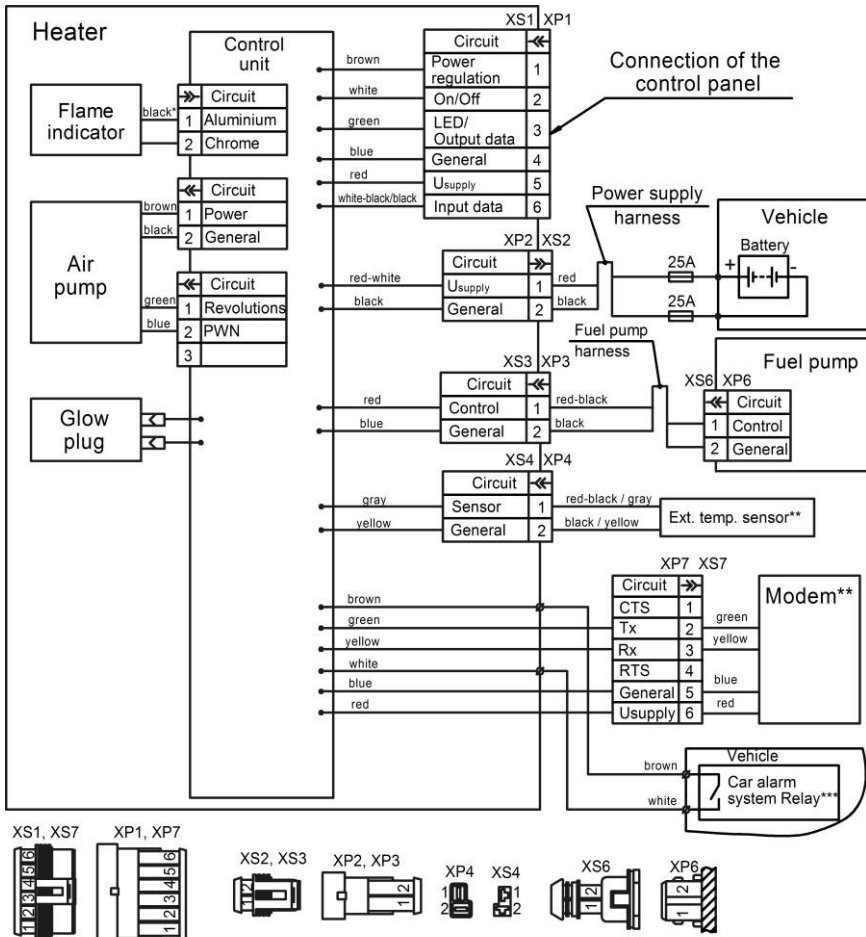


1. Connectors XS4, XP4 are shown from the connections side (not from the side of the wire);
2. \* - wire color code;
3. \*\* - to be ordered separately;
4. \*\*\* - example of connection to vehicle.

## 2. Electrical wiring diagram for the heater AIR-4D

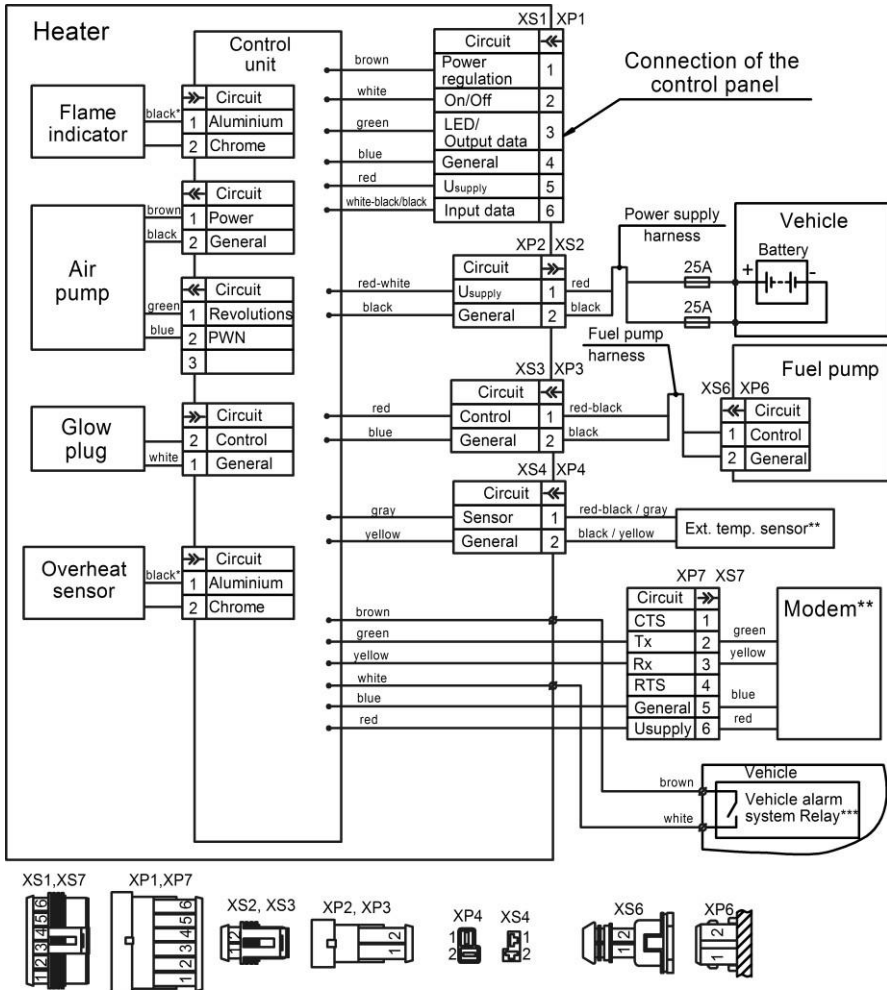

1. Connectors XS4, XP4 are shown from the connections side (not from the side of the wire);
2. \* - wire color code;
3. \*\* - to be ordered separately;
4. \*\*\* - example of connection to vehicle.


### 3. Electrical wiring diagram for the heater AIR-8D

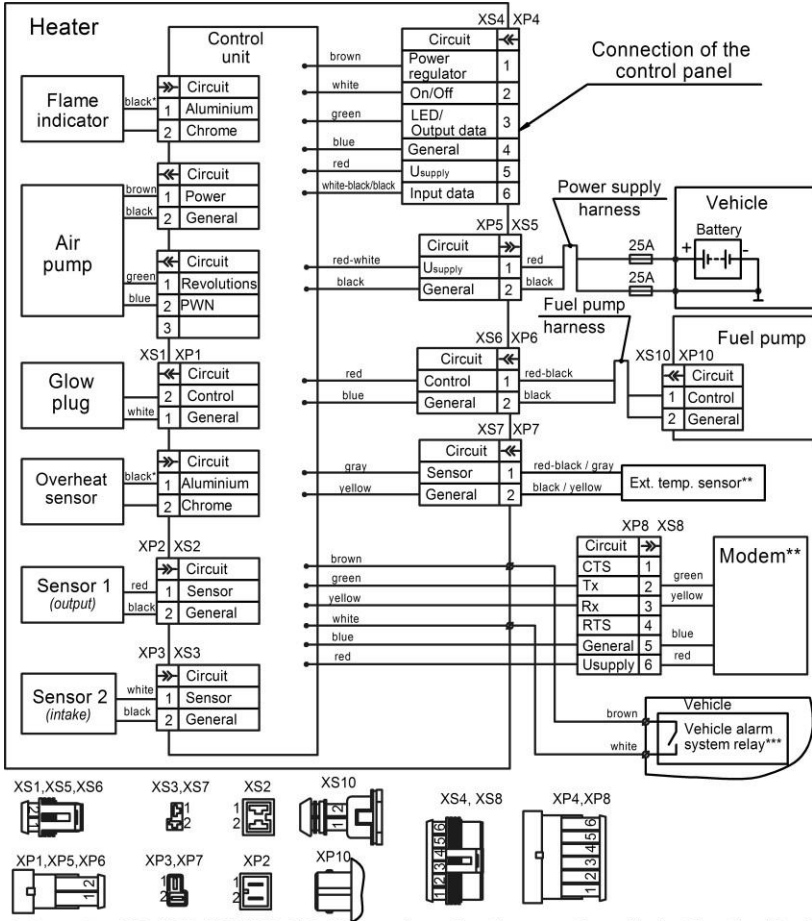

1. Connectors XS2, XS3, XS7, XP2, XP3, XP7 are shown from the connections side (not from the side of the wire);
2. \* - wire color code;
3. \*\* - to be ordered separately;
4. \*\*\* - example of connection to vehicle.



#### 4. Electrical wiring diagram for the heater AIR-9D

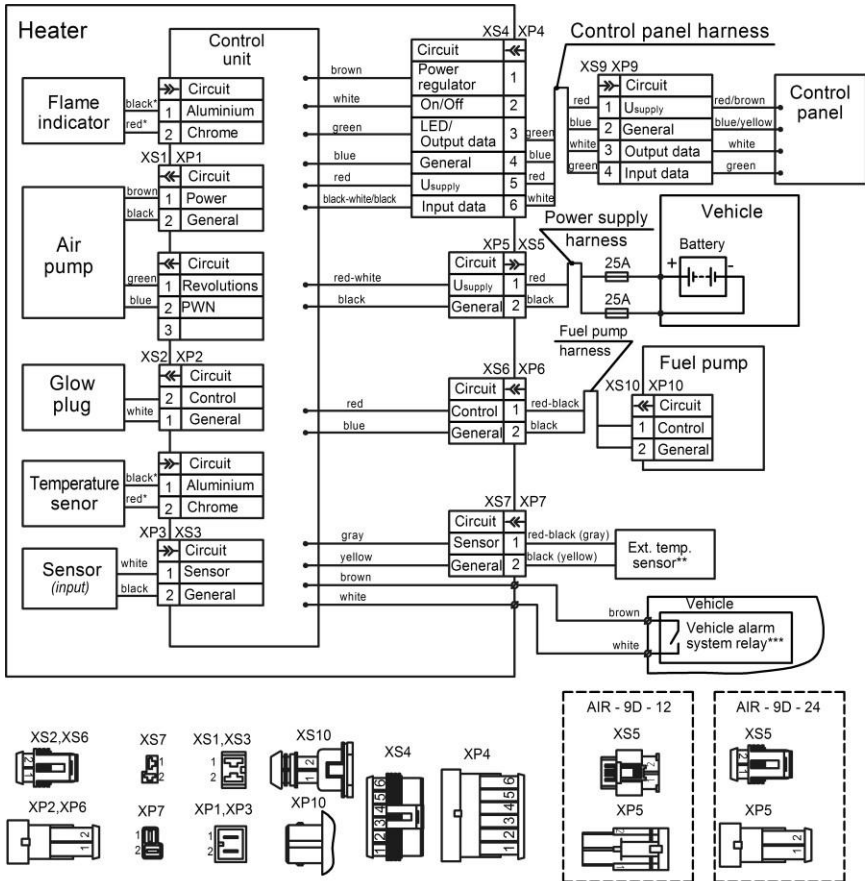

1. Connectors XS1, XS3, XS7, XP1, XP3, XP7 are shown from the connections side (not from the side of the wire);
2. \* - wire color code;
3. \*\* - to be ordered separately;
4. \*\*\* - example of connection to vehicle.